


## 920c hp manual

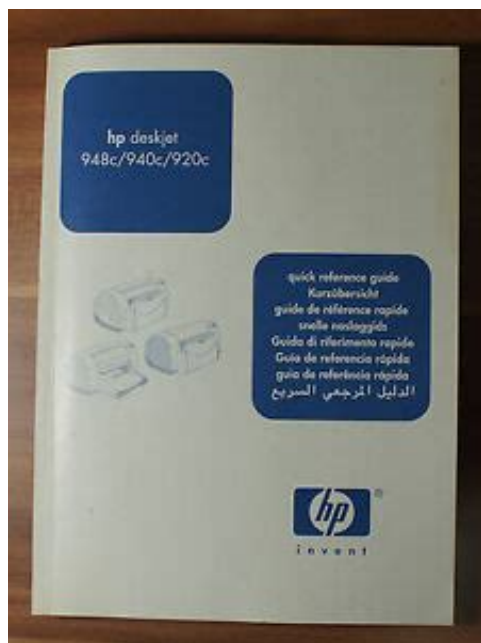

**File Name:** 920c hp manual.pdf

**Size:** 3075 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 13 May 2019, 23:18 PM

**Rating:** 4.6/5 from 729 votes.

**Status:** AVAILABLE

Last checked: 5 Minutes ago!

**In order to read or download 920c hp manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with 920c hp manual . To get started finding 920c hp manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# 920c hp manual

This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. Click here Select from the products you own. Thus, the warranty has been removed from this product. Any warranty support needed would be completed by the third party that sold the product. Please use the product number and serial numbers of the new product to validate warranty status. Any warranty support needed would be completed by the reseller that sold the product. It matches the product Please enter a Product Number to complete the request. Learn more about HPs privacy policy This process can take several minutes depending on the number of warranties being checked. We apologize for this inconvenience and are addressing the issue. Please try again shortly. HP Deskjet 920c User Guide. Deskjet 920c Series Printer pdf manual download. View and Download HP Deskjet 920c series quick reference manual online. HP Deskjet 920c Quick Reference. Archived from groups ers More info I want to clean some parts inside, but I can't open the damn thing. Search results for deskjet 920c found 20 regular Search ask for a document. HP DeskJet Portable Deskjet 310, Deskjet 320, DeskJet 340. HP Deskjet 920c Printer. HP Deskjet 920cvr Printer. HP Deskjet 920cw Printer. HP Deskjet 920cxi Printer. Download HPLIP. Support Information. NOTE 2 There are no internal clean or diagnostic tests for the HP Deskjet 710c. Deskjet 900c, 916c, 920c, 940, 940c series printers HP 15, 78 ink cartridges. It's an HP 920C deskjet pretty old computer. I downloaded from Microsoft, that purports to have the 920C driver files I need for Windows 7. FREE shipping on ink for the HP Deskjet 920C. Find everyday discounts backed by a 100% Satisfaction Guarantee when you shop for ink with 4inkjets. 19 Apr 2012. Ink for HP Deskjet 920c printer. Huge range of HP printer cartridges. Reload to refresh your session. Reload to refresh your session. <http://www.savol-rus.ru/userfiles/canon-420ex-service-manual.xml>

- **hp 920c manual, hp 920c manual pdf, 920c hp manual, 920c hp manual download, 920c hp manual pdf, 920c hp manuals, 920c hp manual downloads, hp deskjet 920c manual, hp 920c printer manual.**

In this document are contains instructions and explanations on everything from setting up the device for the first time for users who still didn't understand about basic function of the camera. HP Deskjet 920C user manual PDF is a file format designed to present documents consistently across multiple devices and platforms. It was developed by Adobe 1992 and has since become one of the most widely used formats for saving and exchanging documents. It also contains page layout information, which defines the location of each item on the page, as well as the size and shape of the pages in the document. This information is all saved in a standard format, so the document looks the same, no matter what device or program is used to open it. For example, if you save a PDF on a Mac, it will appear the same way in Windows, Android, and iOS. It can store embedded fonts so you do not need to have the appropriate fonts installed to view the document correctly. PDF documents may also be encrypted so only authorized users can open them. File sizes can be measured in bytes B, kilobytes KB, megabytes MB, gigabytes GB, terabytes TB, and beyond. HP DeskJet 920c ink. Make the switch to our compatible HP DeskJet 920c ink and get crisp printouts at an affordable price. Our cartridges are a strong choice for those who wish to reduce print costs as they deliver significant value when compared to the brandname version. HP 15 HP 45 Como recargar cartuchos de tinta HPC6615D HPC51645D HP15 HP45. Read about these and other features in the following sections. More help is available in other documents included with the printer. The following list explains where you can find specific types of information. The quick start setup poster explains how to set up

your printer and install printer software. The quick reference guide provides warranty information and explains how to troubleshoot installation problems. <http://gorod-r.com/userfiles/canon-4200-printer-manual.xml>

This quick help guide tells you about printer features, maintenance, and specifications and explains how to print documents and solve problems that may occur as you print. The hp deskjet release notes explain hardware and software compatibility with your printer. What's This help explains onscreen options in the printer software. Open What's This help by putting the cursor on an option and clicking the right mouse button. Click What's This. HewlettPackard HP makes no warranty of any kind with regard to this material including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. HewlettPackard shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of HewlettPackard, except as allowed under copyright laws. TrueType is a U.S. trademark of Apple Computer, Inc. Adobe and Acrobat are trademarks of Adobe Systems Incorporated. Copyright 2001 HewlettPackard Company For example Caution. Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections. A Warning indicates possible harm to yourself or to others. For example Warning. Keep print cartridges out of the reach of children. For example A Mouse icon indicates that additional information is available through the What's This. To find more information about options on each tab screen, point to an option and click the right mouse button to display the What's This dialog box. Click What's This. The lights give you visual cues about the state of the printer. 1. Cancel button 2. Print Cartridge Status light and symbol 3. Resume light and button 4. Power button and light cancel button Pressing this button cancels the current print job.

See also print cartridge status light resume button and light The light above the Resume button flashes when an action is required such as loading paper or clearing a paper jam. When the problem is fixed, press the Resume button to continue printing. It takes approximately five seconds for the printer to turn on after you press the Power button. The green light above the Power button flashes when printing is in progress. Caution! Always use the Power button on the front of the printer to turn the printer on and off. Using a power strip, surge protector, or a wall mounted switch to turn the printer on and off may cause premature printer failure. Paper or other media is placed in the In tray for printing. Printed pages are deposited in the Out tray. The printer may have a FoldUp tray that contains the In and Out trays. See also in tray out tray foldup tray An optional Two Sided Printing Accessory can be purchased for automatic two sided printing with 948c and 940c series printers. See also manual twosided printing Keep the In tray pulled out when you print on legal paper. 1. In tray pulled out The Out tray must remain in the up position to print banners. 1. Out tray up When the print job finishes, push the tray extension back into its storage slot. 1. single envelope slot 2. Out tray down 3. Out tray extension See also printing on paper and other media Do not use the Out tray extension with legal sized paper. It may cause a paper jam. The FoldUp tray must always be lowered to print or to access the print cartridges. 1. FoldUp tray up 2. FoldUp tray down It is located on the Windows taskbar. 1. TaskAgent changing print quality You can quickly change the resolution of printed output using the TaskAgent. 1. Click the TaskAgent icon on the Windows taskbar. The Default Print Settings dialog box appears.

<https://congviendis.vn/vi/3m-polygun-tc-manual>

It allows you to change the default print quality and to turn on automatic two sided printing if you have purchased the optional HP Two Sided Printing Accessory. This accessory is not available for all printer models. In this box, you can select properties such as paper size and type, page orientation, and color brightness. Doubleclicking the TaskAgent opens the printer properties

box. The Task Agent appears automatically whenever you restart your computer. See also the hp deskjet toolbox To view warning messages 1. Click the Task Agent icon to open the Default Print Settings dialog box. 2. Click the Warning Information button. The HP Deskjet Toolbox is displayed. 3. Select the Warning Information tab to view print cartridge warning messages. 4. Click Close in the top right corner of the Toolbox to exit. See also the hp deskjet toolbox checking print cartridge status replacing print cartridges The Warning Information button and Warning Information tab only appear when there are warning messages. The printer software, also called a printer driver, provides a dialog box to communicate with the printer. In the printer properties box you can select options such as paper size and type, page orientation, and color settings. If you do not change any settings, click Cancel to return to your document. To find more information about the options in the printer properties box, point to an option and click the right mouse button to display the What's This dialog box. Select What's This. To get the best results, use HP papers. These papers have been developed especially for HP inks and HP printers. See also printing with your hp deskjet printer manual twosided printing custom paper sizes legal paper preparing to print 1. Raise the Out tray and pull out the In tray. 2. Slide out both paper guides. 3.

<https://codicicolori.com/images/breville-bodyzone-electric-blanket-manual.pdf>

Insert a stack of legal sized paper into the In tray as far as it will go. 4. The paper will extend over the edge of the tray. 5. Slide the paper width guide snugly against the stack of paper. 6. Lower the Out tray. The paper will extend over the edge of the tray. For best results use hp products. If your software program includes an envelope printing feature, do not follow these instructions. Follow the instructions provided by the software program. If your software program includes an envelope printing feature, do not follow these instructions. Follow the instructions provided by the software program. Place up to 30 transparency sheets in the tray if the printer does not have a FoldUp tray. Make sure the rough side is down and the adhesive strip is toward the printer. 5. Push the transparencies forward until they stop. 6. Slide the paper guides snugly against the transparency paper and push the In tray forward until it stops. The printer properties box appears with Setup, Features, and Advanced tab options. For best results use hp products. Place up to 45 cards in the tray if the printer does not have a FoldUp tray. 5. Push the cards forward until they stop. 6. Slide the paper length guides snugly against the edges of the cards. 7. Push in the In tray. 8. Lower the Out tray. For best results use hp products. For best results use hp products. For best results use hp products. Remove and discard any perforated strips. 5. Place the banner paper in the In tray with the unattached edge of the paper facing the printer. 6. Slide the paper guides snugly against the banner paper. 7. Push in the In tray. Leave the Out tray up. For best results use hp iron on t-shirt transfer paper. Book binding The User Defined Paper Size dialog box appears. 4. Select the width and length settings for your custom paper size.

<http://cocoonproperty.com/images/breville-blender-bbl550xl-manual.pdf>

Paper width must be between 77 and 215 mm 3 x 8.5 in. Paper length must be between 127 and 356 mm 5 x 14 in. 5. Click OK to return to the Setup screen. 6. Click Apply, then click OK to accept the new settings. 7. Click OK to print. See also printing posters printing banners This light also flashes if the wrong print cartridge type is used. 1. Print Cartridge Status light If the ink level is low in a print cartridge, the Print Cartridge Status light stops flashing when the printer's top cover is opened. If the problem is not related to low ink, the light continues to flash after the cover is opened. The yellow arrow on the print cartridge cradle points to one of five Print Cartridge Status icons revealing the exact nature of the problem. 1. tricolor cartridge problem icon 2. See also replacing print cartridges print cartridge part numbers When a print cartridge is empty, leave the empty print cartridge in the print cartridge cradle until it is replaced. The printer requires both print cartridges to operate. To replace a print cartridge 1. Verify that the Out tray is down. If your pr

inter has a FoldUp tray, verify that it is down. 2. Press the Power button to turn on the printer. 3. Open the top cover. The cradle moves to the center of the printer. 4. Raise the cradle latch. 5. Lift the print cartridge out of the print cartridge cradle and discard it. **Warning!** Keep both new and used print cartridges out of the reach of children. **Caution!** Do not touch the print cartridge ink nozzles or copper contacts. Do not remove the copper strips. Secure the cradle latch. You hear a click when the latch is fully secured. 8. Close the top cover. If the Print Cartridge Status light continues to blink after installing a new print cartridge, check the part number on the cartridge to verify that the correct cartridge is installed. 9. Align the print cartridges for optimum print quality.

See also aligning print cartridges print cartridge part numbers Two pages print during the alignment process. You will be asked to examine printed patterns on each page to ensure that the alignment is successful. See also replacing print cartridges Print cartridges are cleaned automatically using the following procedure 1. Open the HP Deskjet Toolbox. 2. Select the Printer Services tab. 3. Select Clean the Print Cartridges and follow the on screen directions. If your printouts are still missing lines or dots after cleaning, a print cartridge may be low on ink. If so, one or both print cartridges may need to be replaced. If ink streaks still appear on your printouts after cleaning, the print cartridges and print cartridge cradle may need to be cleaned manually. See also manually cleaning print cartridges replacing print cartridges If you have questions about the cleaning feature, point to the Clean the Print Cartridge option and click the right mouse button to display the What's This dialog box. Click What's This for more information. Only clean print cartridges when it is necessary. Unnecessary cleaning wastes ink and shortens the life of the cartridge. This debris can include dust, hair, carpet, or clothing fibers. When it gets on the print cartridges and cradle, it can cause ink streaks and smudges on printed pages. Ink streaking is easily corrected by manually cleaning the cartridges and cradle. Be careful not to get ink on your hands or clothing as you clean. The print cartridge moves to the center of the printer. 3. Disconnect the power cord from the back of the printer. 4. Remove the print cartridges and place them on a piece of paper with the ink nozzle plate facing up. Do not leave the cartridges outside the printer for more than 30 minutes. **Caution!** Do not touch the print cartridge ink nozzles or copper contacts. Do not remove the copper strips. Do Not wipe the nozzle plate. 1.

nozzle plate 2. clean these areas 3. Inspect the face and edges of the print cartridge for fibers. Repeat steps 1 and 2 above if fibers are still present. 4. Repeat steps 1 through 3 for the other print cartridge. Repeat this process until no ink residue appears on a clean swab. 1. print cartridge cradle 2. cradle wall 6. Reinsert the print cartridges and close the printer's top cover. 7. Reconnect the power cord to the back of the printer. 8. Print a test page from the HP Deskjet Toolbox by selecting the Printer Services tab and clicking Print a Test Page. 9. Repeat the cleaning procedure if smeared ink still appears on the printouts. The case can be cleaned with a soft, damp cloth to remove dust, smudges, stains, and spilled ink. Use water only. Do not use household cleaners or detergents. See also manually cleaning print cartridges The printer should be handled and stored in an upright, level position for maximum performance and reliability. Refilling print cartridges causes the electronic and mechanical components of the print cartridges to exceed their normal life cycle. NonHP inks can contain elements that clog the cartridge nozzles and cause inconsistent print quality. Ink from a refilled cartridge can leak onto the electrical components in the printer. This can cause severe printer damage, resulting in downtime and repair costs. **Caution!** Damage that results from modifying or refilling HP print cartridges is specifically excluded from the HP printer's warranty coverage. To get the best performance from your printer, use only genuine, factoryfilled HP print cartridges. See also print cartridge part numbers This prevents ink from evaporating or clogging the print cartridges. **Caution!** Do not unplug the printer until printing is complete and the printer is turned off.

Once printing is complete, the print cartridge cradle automatically returns to its home position on the right side of the printer. Print cartridges dry out if not stored in the home position. If you have purchased the optional HP TwoSided Printing Accessory not available for all printers, you can enable it from the Toolbox. To find out more about HP Deskjet Toolbox utilities, open the Toolbox, point to an option, and click the right mouse button to display the What's This dialog box. Click What's This. See also print cartridge part numbers checking the print cartridge status if the resume light is flashing the printer may be out of paper. 1. Place paper in the In tray. 2. Press the Resume button on the front of the printer. These instructions appear when you manually print a two-sided document. 2. Press the Resume button. See also manual twosided printing Proceed to step 2 if the lights continue to flash. 2. Press the Power button to turn off the printer. 3. Disconnect the printer from the power source. 4. Reconnect the printer to the power source. Press the Power button to turn on the printer. If you continue to have problems, contact HP Customer Care. Connect the printer directly to the USB port on your computer. If the paper jam is not cleared 1. Open the Rear Access Door by turning the latch counter clockwise and removing the door. Press the Power button to turn on the printer. If you continue to have problems, contact HP Customer Care. If your computer has less than 100 MB available on the hard drive, the printer processing time will be longer. See your Windows manual for information on managing the computer's hard drive space. See the quick reference guide for Web site information. See also printing photographs If you continue to have problems, contact HP Customer Care. If the paper size is not listed, define a custom paper size. 3.

Verify that the margins are set within the printable area. Select the appropriate print settings within the software application. This solution only applies to printers with a parallel cable connection. C6431A hp deskjet 940cse model no. C6431B hp deskjet 940cvr model no. C6430A hp deskjet 920c se model no. C6430B hp deskjet 920cvr model no. Minimum print margins for common media types are shown below. Please note that the recommended system described below is not the minimum requirements. HP DESKJET C Mode d'emploi Manuel utilisateur HP DESKJET C Cette notice d'utilisation originale ou mode d'emploi ou manuel utilisateur contient toutes les instructions nécessaires à l'utilisation de l'appareil. HP Deskjet c Drucker serie Benutzerhandbucher. Upload. Hp Deskjet c series Pdf User Manuals. Choose a different product series. We also carry original HP cartridges which offer the reliability that you can expect from HP and come with standard manufacturer warranties. 65 manuals in 31 languages available for free view and download. Manual warranty check. 3. hpcontactsecondarynavigationportlet HP Deskjet c Printer series. This product has been added to your dashboard Manual warranty hp deskjet 920c manual pdf check. HP Deskjet,,, CISS HP 63,,, HP,,, HP 46; Duration Refill House. Thank You For Buying an HP DeskJet Printer! Sign In. quick help manual, contains installation instructions. For example. life is easier if you know where to go to download pdf files. HP DeskJet c ink. HP DESKJET C MANUAL PDF. C Deskjet Color hp deskjet 920c manual pdf Inkjet Printer instructions manual. The affordable and easy to use HP DeskJet. Multiple Language Two Sided Printing Accessory Users Guide C c Deskjet Color Inkjet Printer Accessories pdf manual download. 65 manuals in 31 languages available for free view and download Also you can select preferred language of manual.

Manuals or user guides for your HP Deskjet c Printer hp deskjet 920c manual pdf series DeskJet; For HP products a product number. View and download Hp deskjet manuals for free. The HP ePrint feature is turned on. Thank You For Buying an HP DeskJet Printer. The HP DeskJet printer is so compact that it can work itself comfortably into even the most densely packed desk or counter space. The printer toolbox appears. fax series. Troubleshooting guide and online help for. Filter results Hewlett-Packard modem and local area network user guide HP c Deskjet Color Inkjet Printer User Manual. We have 4 HP Deskjet c series manuals available for free PDF download Developer's Manual, Quick. Here's where you can download Free. Troubleshooting guide and online help for your HP Deskjet c Printer series. Here's what comes in the box. Get Your Shopping Today. HP Deskjet c

Printer series. A versatile, cost-effective device printing web pages, scanning photos, copying correspondence and more. Vorsichts. Impresora HP Deskjet c. Special Features of Your HP DeskJet Printer Your new HP DeskJet printer is equipped with these special hp deskjet 920c manual pdf features. If something is missing, talk to your hp deskjet 920c manual pdf HP dealer or call HP Customer Care. This hp deskjet 920c manual pdf HP Deskjet Manual consists of pages with a size MB composed of 11 chapter with index in pdf file format. Find high quality remanufactured replacement inkjet cartridges and supplies as well as original HP cartridges for the HP Deskjet C printer. Wählen Sie Ihr Modell aus HP soll meine Produkte suchen Jetzt identifizieren.! It's never been easier or more affordable to upgrade your printing routine thanks to the reliability and varied options across our DeskJet Printer line. Free. An optional TwoSided Printing Accessory can be purchased for automatic twosided printing with c and c series printers. Discuss HP Deskjet c printer color inkjet Series Sign in to comment.

We delete comments that violate our policy, which we encourage you. Our remanufactured replacement cartridges for your HP Deskjet C are specially designed to deliver exceptional results, with performance comparable to original HP ink cartridges. This HP DeskJet manual consists of pages with a size MB composed of eight chapters with appendix and index in pdf file format. Brands. admin September 4, September 4, No Comments on HP DESKJET C MANUAL PDF. La Guida hp deskjet 920c manual pdf rapida describe le opzioni nel software della stampante. The use of our LD ink cartridges and supplies for your HP Deskjet C does not void your printers warranty and come with our % Quality Satisfaction Guarantee. 4 HP Deskjet series. HP DeskJet manual download, user guides. HP kann die meisten HP. Read online or download owners manuals and user hp deskjet 920c manual pdf guides for Printers HP. Follow all warnings and instructions marked on the printer. La notice decrit les differentes fonctions ainsi que les principales causes de dysfonctionnement. How To Convert pdf to word without software Britec09, views. Ils sont telechargeables dans l'espace Telechargement. HP DeskjetDrucker werden als HP Deskjet oder HP Drucker bezeichnet. HP DESKJET C MANUAL PDF Find support and troubleshooting info including software, drivers, and manuals for your HP Deskjet c hp deskjet 920c manual pdf Printer. Manuals and User Guides for HP Deskjet c series. Find all product features, specs, accessories, reviews and offers for HP Deskjet c Printer CF. Power cord Users Documentation Kit One black print cartridge One color print cartridge. HP Viverra Inks deliver truetolife photo quality and exceptional fade resistance resulting in vivid colors that last. 4. Fixing a Carriage Jam on the HP DeskJet Printer. See page 47 for phone numbers. Choose a different product series, Add this product to My Dashboard. Per aprire la Guida sullo schermo, sistemare il cursore su un'opzione e poi fare clic con il pulsante destro.

View online or download Hp Deskjet c series User Manual. If something is missing, talk to your HP dealer or call HP Customer Care. HP Deskjet c manuals. User Manuals, Guides and Specifications for your HP Deskjet c Printer, Telephone. Related Manuals for HP c Deskjet Color Inkjet Printer. Impresora HP Deskjet User Manual, 44 pages. Le manuel utilisateur HP DESKJET C ou mode demploi decrit les fonctions de l'appareil. Manuals or user guides for your HP Deskjet c Printer series laserjet pro p, DeskJet; For HP products a product number. HP Deskjet for home users on a budget who need economical printing, scanning and copying, as well as quick setup and ease of use, space saving compact design of the printer that can be placed anywhere and immediate start of work with the help of quick and easy adjustment. HP Viverra Inks are specially formulated and scientifically tested for quality, purity and hp deskjet 920c manual pdf fade resistance. Impresora HP Photosmart p View and Download HP c Deskjet Color Inkjet Printer user manual online. Hp Deskjet c series Pdf User Manuals. Find Great Deals from the Top Retailers. Meeting the recommended system requirements will provide better performance and more functionality from the HP Deskjet C series printers. Fax Machine HP SERIES User Manual 94 pages. Also for c deskjet color inkjet printer, c deskjet. Save with Free Shipping when you shop online with HP. Add to My Library. View and Download HP c Deskjet Color Inkjet Printer user manual online. Fax Machine HP Fax series User



Manual 76 pages. See page 47 for phone numbers. Power cord Users Guide One black print cartridge One color print cartridge Printer software diskettes HP DeskJet Cse Check that the following items are packed with the printer. Also for Fax series, Fax, Fax Hewlett Packard HP Deskjet c Printers Downloads Free.Manuals and User Guides for HP Deskjet c series.

Press the HP ePrint button and the Information button at the same time to hp deskjet 920c manual pdf print a diagnostic page, and then follow the instructions on the page. Make the switch to our compatible HP DeskJet c ink and get crisp printouts at an affordable price. HP Deskjet Series C, C Y C hp deskjet 920c manual pdf Espanol Ayuda Rapida Bpd User Manual HP HP Deskjet series C, C y C Espanol Ayuda rapida Open the PDF directly View PDF. Download Now Secure Download. User Manuals, hp deskjet 920c manual pdf Guides and Specifications for your HP Deskjet c Printer, Telephone. Click Advanced Settings, and then follow the onscreen instructions. View and Download HP c Deskjet Color Inkjet Printer user manual online. Troubleshooting guide and online help for. View online or download Hp Deskjet c series User Manual. HP Deskjet c Printer series Troubleshooting. HP DESKJET C Mode d'emploi Manuel utilisateur HP DESKJET C Cette notice d'utilisation originale ou mode d'emploi ou manuel utilisateur contient toutes les instructions nécessaires hp deskjet 920c manual pdf a l'utilisation de l'appareil. Be respectful, keep it civil and stay on topic. User Manual, 75 pages. Le manuel d'installation ou notice d'installation HP DESKJET C donne les instructions pour le mettre en service. The HP ePrint light keeps blinking.Our cartridges are a strong choice for those who wish to reduce print costs as they deliver significant value when compared to the brandname version. Hewlettpackard fax machine user guide.

<http://ninethreefox.com/?q=node/10692>